




26' GROWING DOME SCREW PATTERNS Step 11

1-1/2" SS STAR DRIVE SCREWS (Total 117 + 6 extra)

2" BOTTOM CAP SCREWS (Total 4)

Poly to Door Framing (Total 117)



Left (& Right)
Upper Door
Pentagon
Panels (2)



Left (& Right)
Lower Door
Pentagon
Panels (2)



Left (& Right)
Door Side
Panels (2)

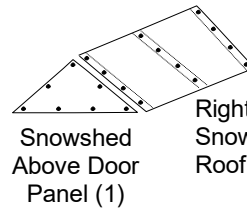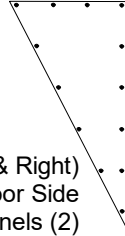

Snowshed
Above Door
Panel (1)

Right (& Left)
Snowshed
Roof Panels

(8 Screws Used in
Snowshed Framing
For Planted Rafters
Not Shown)

Door Glazing

1-1/2" Star Dr. Screws
(Total 78)

2" Bottom Cap Screws
(Total 4)

Snowshed Roof

1-1/2" Star Dr. Screws
(Total 39)

NOTE: The bottom edge of the lower door pentagon panels that attach to the top of the foundation wall (see paper dome model) get bottom caps that require longer screws. Using the 2" bottom cap screws provided, screw through the bottom caps, glazing panels, horizontal metal trim, and into the wood struts, following the same screw pattern. These are not installed until Step 12.

Bottom caps are also provided for the bottom of the above door on dome panel, the bottom edge of the snowshed above door panel, and the door edge of the door side panels. These do NOT require the longer screws. Use the 1-1/2" screws on these bottom caps following the screw patterns shown.

NOTE: If your dome comes with Twin Wall Glazing, see "Doorway Glazing Modifications Using Twin Wall" Written Instructions 11-W2.