





26' GROWING DOME SCREW PATTERNS Step 12

BOTTOM CAP SCREWS (Total 74 + 4 extra)


Bottom Caps to Poly at Foundation Wall (Total 74)

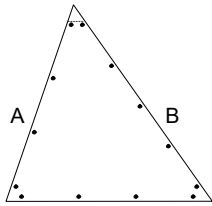

A
A Triangle (23)
(4 with B Edge
Bottom Caps)

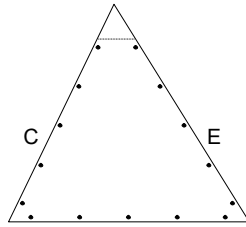

B
RHB (LHB) Triangle (10)
(All 10 with C Edge
Bottom Caps)

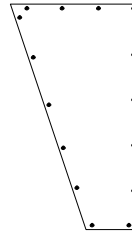

Left (& Right)
Lower Door
Pentagon
Panels (2)

Triangles
Bottom Cap Screws
(Total 70)

Door Glazing
Bottom Cap Screws
(Total 4)

NOTE: The bottom edge of the triangles and lower door pentagon panels that attach to the top of the foundation wall sections (see paper dome model) get bottom caps that require star drive ss screws. Using the 1-1/2" (on 8mm bottom caps) or 2" (on 16mm bottom caps) star drive ss screws provided, screw through the bottom caps, glazing panels, horizontal metal trim, and into the wood, following the same screw patterns as shown above.