




26' GROWING DOME SCREW PATTERNS Step 15

3/4" HEX HEAD SCREWS (Total 186 + 9 extra)

Wall Liner (Total 186)

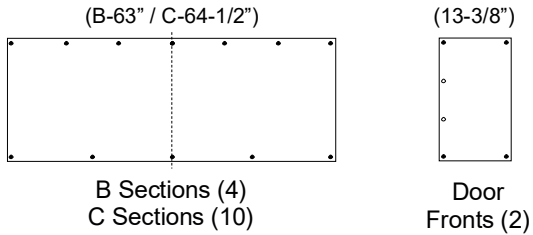

NOTE: Place two additional hex head screws vertically along the beginning and ending edges of the wall liner at door and also where liner lengths join together (6" overlap). (Total 6)

Overlap is then covered with a strip of duct tape.