



26' GROWING DOME DRIP EDGE FLASHING

MATERIALS LIST

The following drip edge panels are included with the 26' Growing Dome kit:

- 4 – “B” flashing panels (6” x 54”)
- 10 – “C” flashing panels (6” x 55”)

INSTALLING THE DRIP EDGE FLASHING

Clean and dry the polycarbonate, or reflectix, if needed, where the drip edge flashing will be installed. Then wipe with isopropyl alcohol. Refer to the dome model for drip edge flashing placement on the base struts. “B” flashing panels are installed over “B” base struts and “C” flashing panels are installed over “C” base struts.

Install the shorter “B” panels first, which are placed on top of the “B” base strut, under the pentagon hubs (See Diagram 1 below). The “C” panels will sit on the “C” base struts, under the hexagon hubs. There are enough flashing panels to go around the entire dome, including behind the above ground pond metal.

It is best to place each panel on the polycarbonate, or reflectix, prior to removing the tape backing and decide exactly where you want it to go. There should be a 3/4” space from the top of the base strut back edge to the underside of the flashing (See Diagram 2 below). It should be centered horizontally, and the front edge of the flashing should contact the front edge of the strut. Then mark the top and side edges at both ends lightly with a fine point marker. This way when you’re ready to place it, there will be no guess work.

Remove the tape backing and carefully hold the short edge of the drip edge flashing to your marks and press firmly against the polycarbonate, so that the flashing angles down over the front edge of the strut. A little isopropyl alcohol on a clean rag will remove any location marks still visible.



Diagram 1

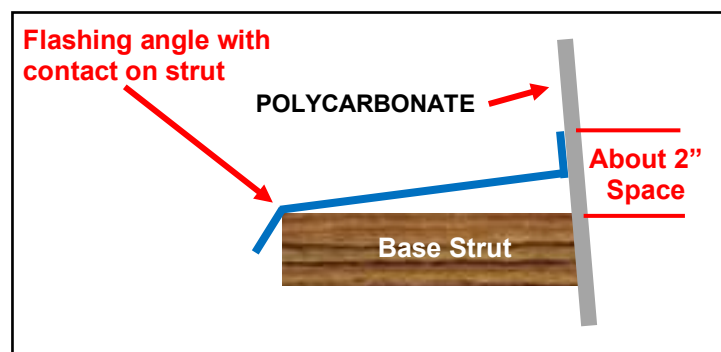


Diagram 2