




26' GROWING DOME SCREW PATTERNS Step 9

1-1/2" SS STAR DRIVE SCREWS (Total 874 + 43 extra)

Poly to Struts (Total 874)

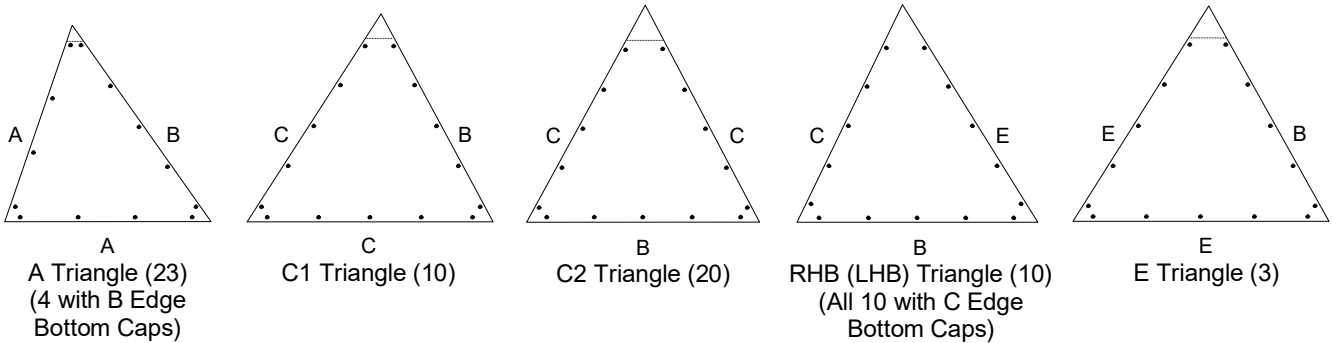

NOTE: Bottom caps are provided for the cut triangle edges (not factory edges) that are adjacent to the unhinged edges of each vent. These do NOT require longer screws. Use the 1-1/2" screws on these bottom caps following the screw pattern shown.

The bottom edge of the triangles and lower door pentagon panels that attach to the top of the wall sections (see paper dome model) get bottom caps that require longer screws as shown in Step 12. They will use 2" bottom cap screws provided, screwed through the bottom caps, glazing panels, horizontal metal trim, and into the wood struts, following the same screw patterns.